


Mounting instruction upper flap for UK top

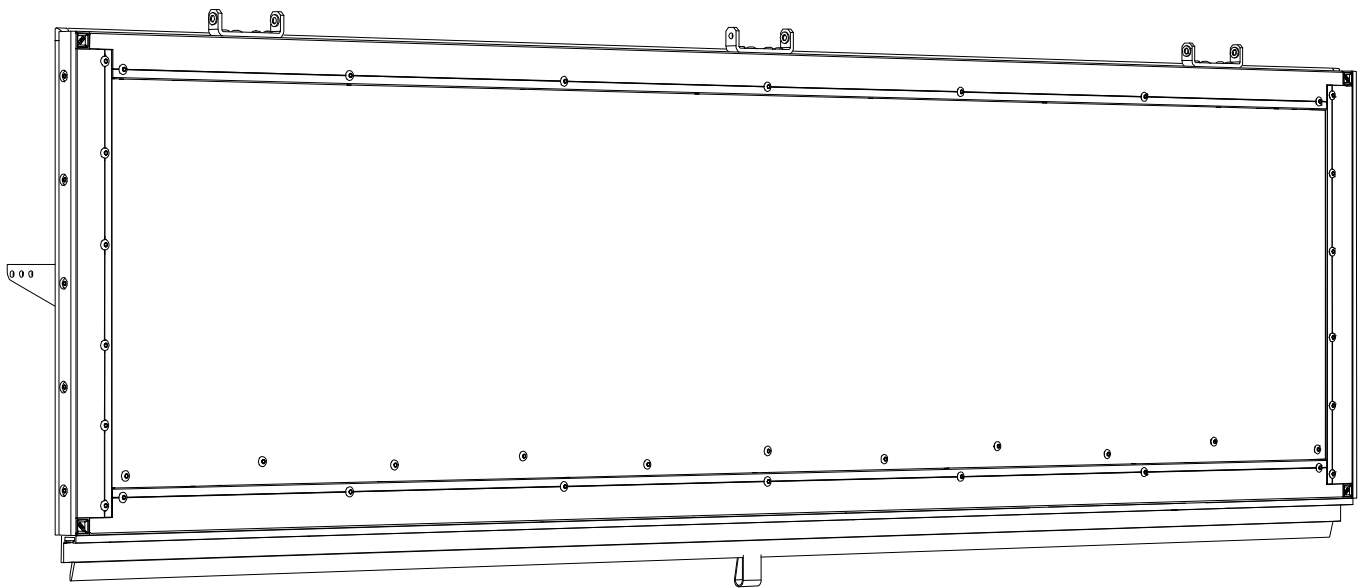

Translation of the original mounting instruction

 **Contents**

1 General	03
2 Safety.....	05
3 Calculation sheet	06
4 Mounting of fixing brackets	07
5 Mounting of crossbar	08
6 Mounting of rain and cover strip (normally done by tarp maker)	09
7 Mounting of double joints	10
8 Mounting of retainers and water drip.....	11
9 Mounting of gas pressure springs to the fixing brackets.....	12
10 Mounting of upper flap to the crossbar	13
11 Mounting of gas pressure springs to the upper flap.....	14
12 Annexes	15

GENERAL REMARKS

Introduction to Mounting Instruction

Alteration service: Yes

Staff: According to curriculum for apprenticeship as a body and vehicle mechanic and a body and vehicle construction mechanic.

This Mounting Instruction is part of the delivery and an important help for successful mounting. Therefore, it must be available to the mechanic during the mounting works.

Furthermore, the assembly guidelines of the applicable vehicle producers must be obeyed.

Copyright:

The copyright for this mounting instruction is reserved by TSE Trailer System Engineering GmbH & Co. KG

If you need any further information, do not hesitate to contact us:

TSE Trailer System Engineering GmbH & Co. KG
Bei der Mühle 4
72365 Ratshausen
Germany
Phone: +49 (0)7427 / 92 33-0
Fax: +49 (0)7427 / 92 33-75
Email: verkauf@tse-trailersystems.de
Homepage: www.tse-trailersystems.de

Instruction and training support

As an employer, you are obliged to inform and instruct your personnel about existing legal and accident prevention regulations.

The personnel must have understood these instructions, and it must be safeguarded that the instructions are obeyed.

Only in this way you will reach safety and danger awareness of your personnel at work.

Example for training topics

1. About safety

- Accident prevention regulations
- General legislation
- General safety hints
- Measures in emergency cases
- Personal protective equipment

2. Maintenance and repair regulations

- Correct use of cleaning agents and lubricants
- Special experience of the mechanic in maintenance, repair, cleaning and upkeep of the product

Hints



ATTENTION!

Texts with this symbol will warn you against possible mistakes in mounting and, therefore, against potential material damages.



HINT!

Texts with this symbol will give you tips or additional information.



TIGHTENING TORQUE!

Texts with this symbol will give you the necessary tightening torques.

Safety

General

Although our products are in accordance with the state of the art, they may pose a risk if:

- they are mounted by unskilled personnel
- they are maintained improperly.

Safety hints

This safety instruction informs you about the products of TSE Trailer System Engineering GmbH & Co. KG. It contains information about maintenance and repair of the parts and their components. The service instruction has only been written for skilled personnel of qualified and authorized specialized companies in motor vehicle crafts. The service instruction is not applicable for other target groups.

We want to support specialized companies with the present mounting instruction during the mounting works with our products.

TSE Trailer System Engineering GmbH & Co. KG accepts no liability for the installation of inapplicable or unreleased parts in their products.

Defects due to wrong handling, use of force or subsequent changes of the delivered product or single components of it, as well as non-observance of the safety hints and consequential damages caused thereby, are not covered by our warranty.

Only use unchanged original parts and accessories supplied by the manufacturer.

We do not accept any warranty for the correctness, completeness or currency of the given information. The contents and information of this mounting instruction are neither a warranty or warranted characteristics within the meaning of German legislation, respectively the German Civil Code (Bürgerliches Gesetzbuch (BGB)), nor can they be interpreted as such.

No claims can be derived from provision of information, recommendation or consulting. Liability for damages is generally excluded as far as we are not responsible in the sense of intent or gross

negligence, or as far as this does not contradict mandatory legal provisions.

Texts and graphics are subject to our rights of use; copy rights or right of distribution in any form require our agreement.

Mentioned brand names, even if they are not marked as such in every case, are still subject to the regulations of the trade mark law.

If any disputes of legal nature occur from applying information found in this mounting instruction, they shall solely be subject to the regulations of German law.

The Amtsgericht Stuttgart (Local Court in Stuttgart) is deemed to be agreed on as place of jurisdiction. If some clauses of this declaration about limitation of liability do not or no longer comply with the applicable legal provisions, the validity of the other clauses shall remain unaffected thereof.

Read the information in this mounting instruction carefully. Especially, obey the hints for your own safety.

All technical information, descriptions and pictures shall be valid from the day of their printing - respectively the day of any supplements hereto - on.

We reserve the right to make changes due to steady further development.

No claims can be derived from applications and explanations of this publication.

Safety hints for the technician:

Unauthorized people are not allowed to enter the vehicle and the area around it.

Your working area should be in good order.


Only works which you are commissioned and acquainted with have to be executed.

Increased caution is advisable in dangerous areas.

Obey the producer's information and safety hints for the applicable product when you deal with operation materials (oils, grease etc.).

Only applicable lifting devices may be used.

Calculation sheet

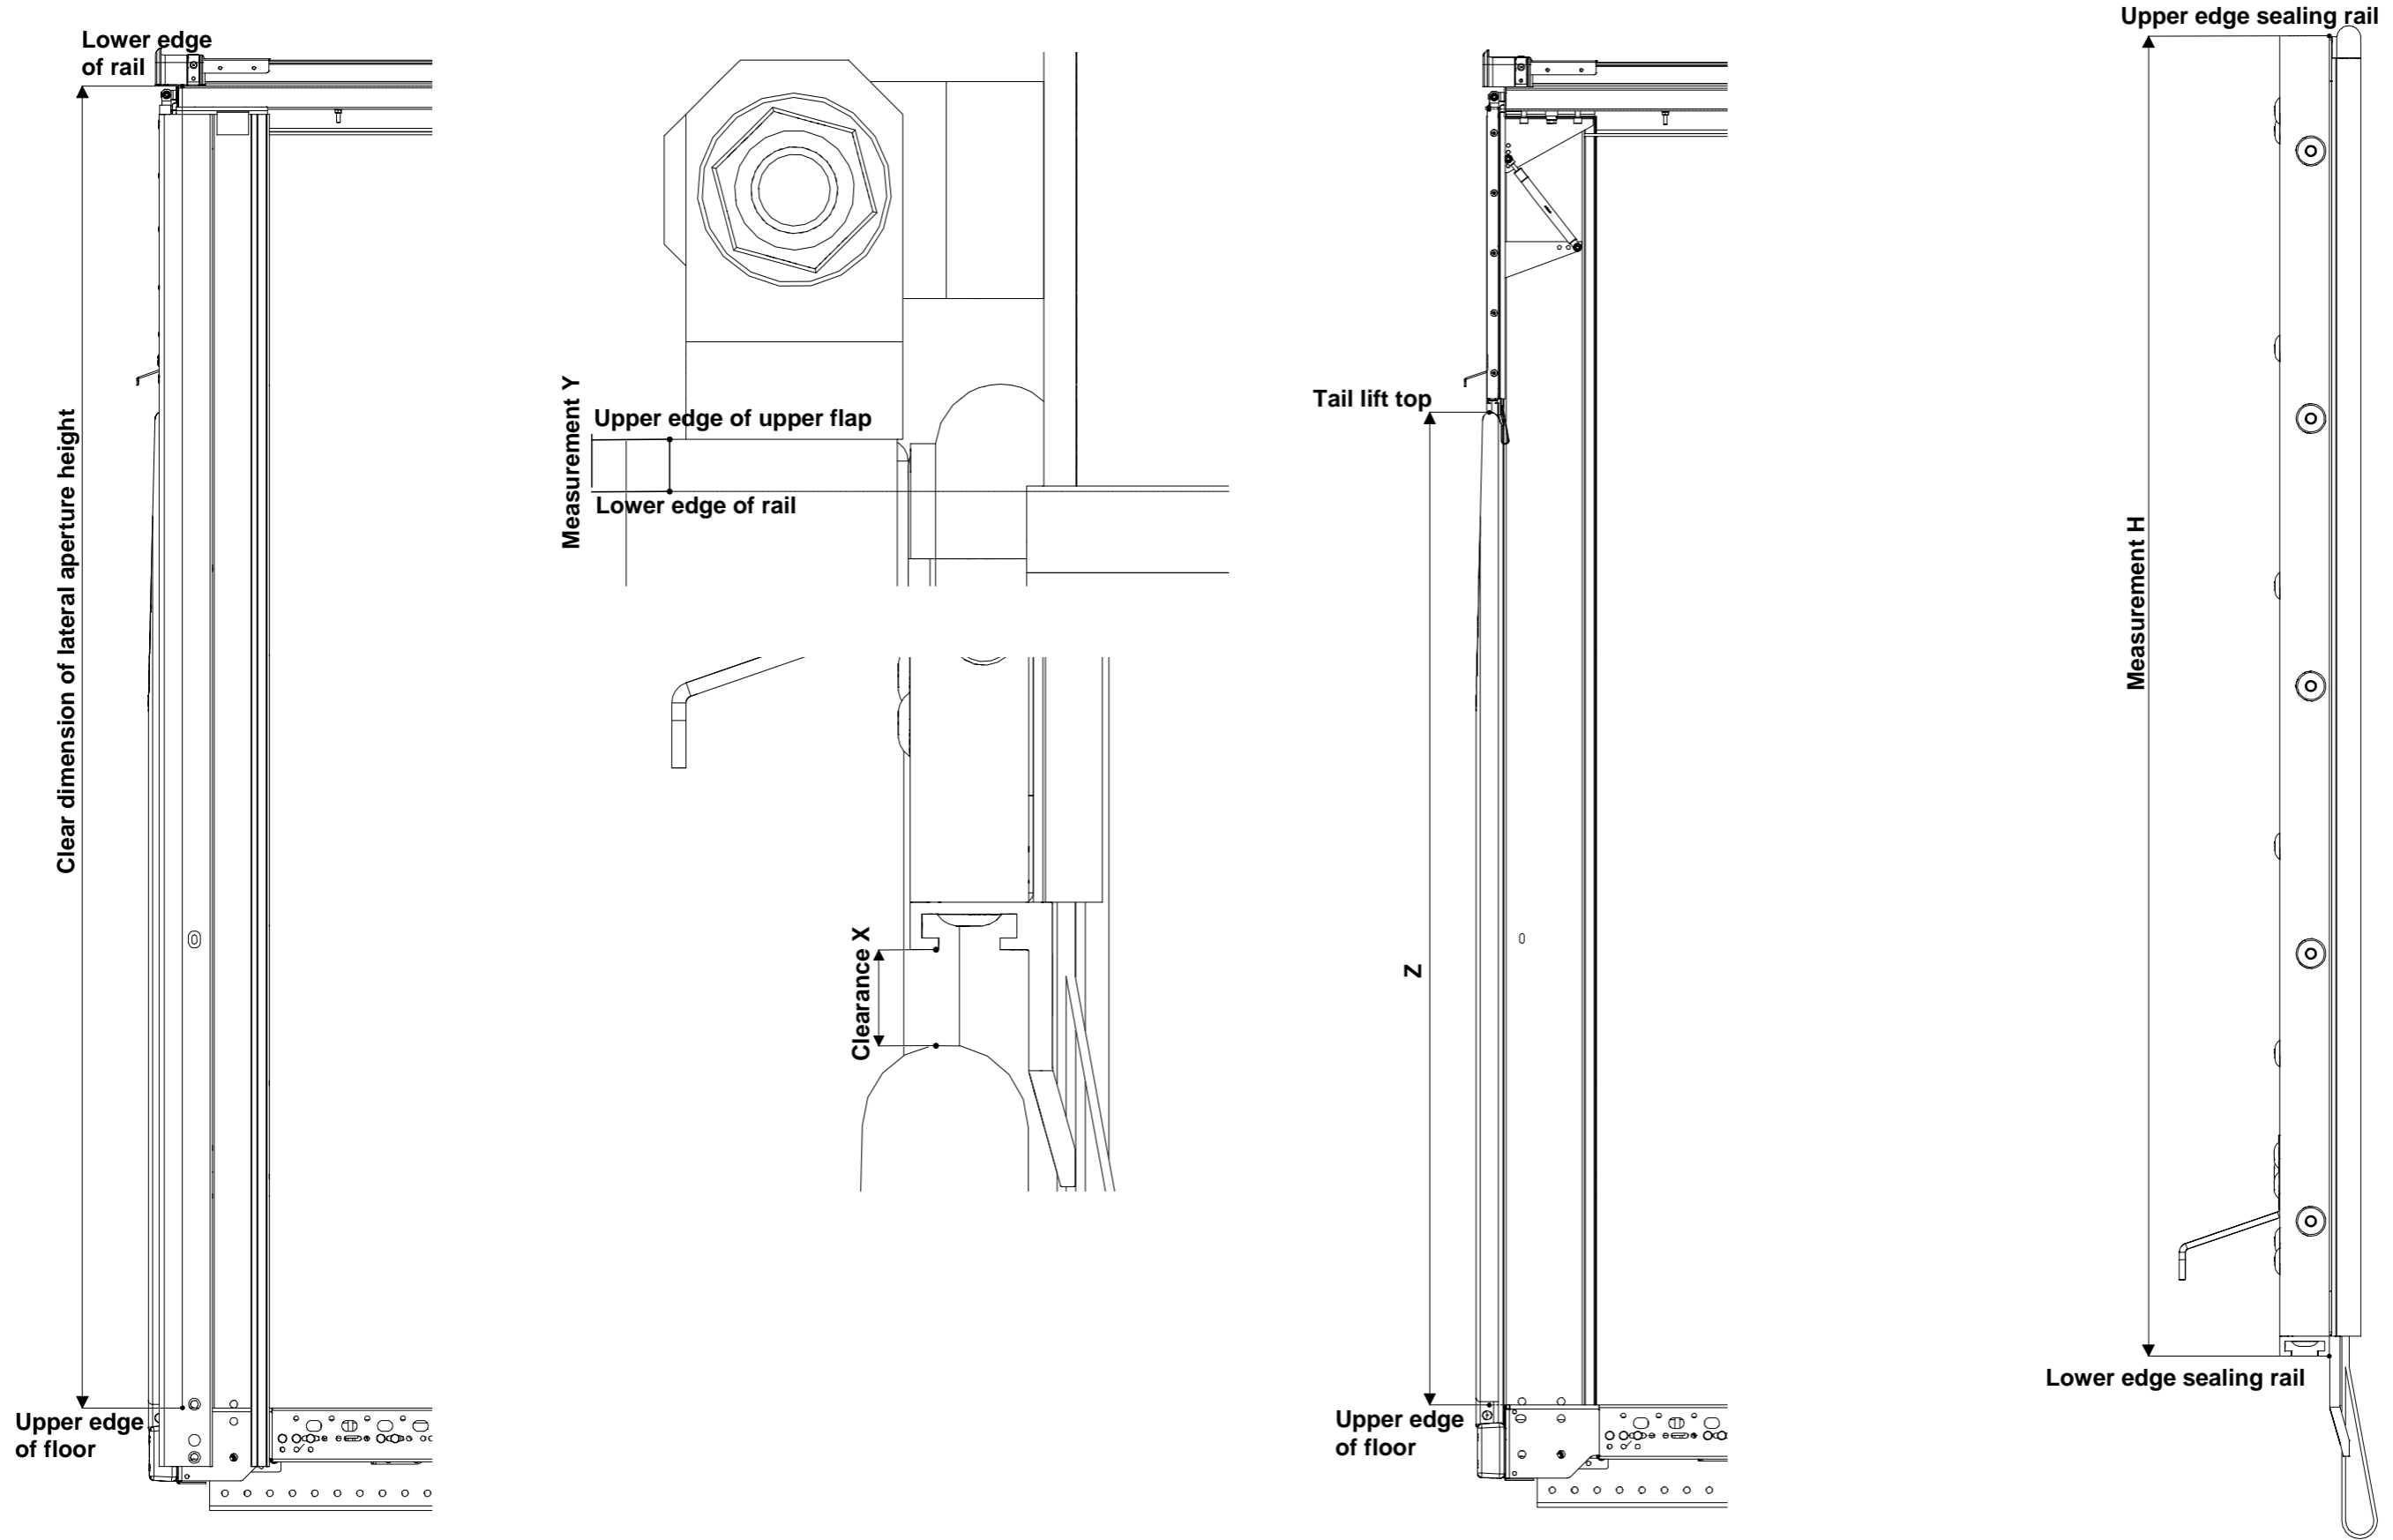


The length of the upper flap (measurement H) is calculated as follows:
 Lateral aperture height + differential dimension Y (10mm) – measurement of clearance X (20mm) – tail lift top to upper edge of floor (Z) = upper flap length (measurement H)

Mounting of fixing brackets

1

Screwing the fixing brackets

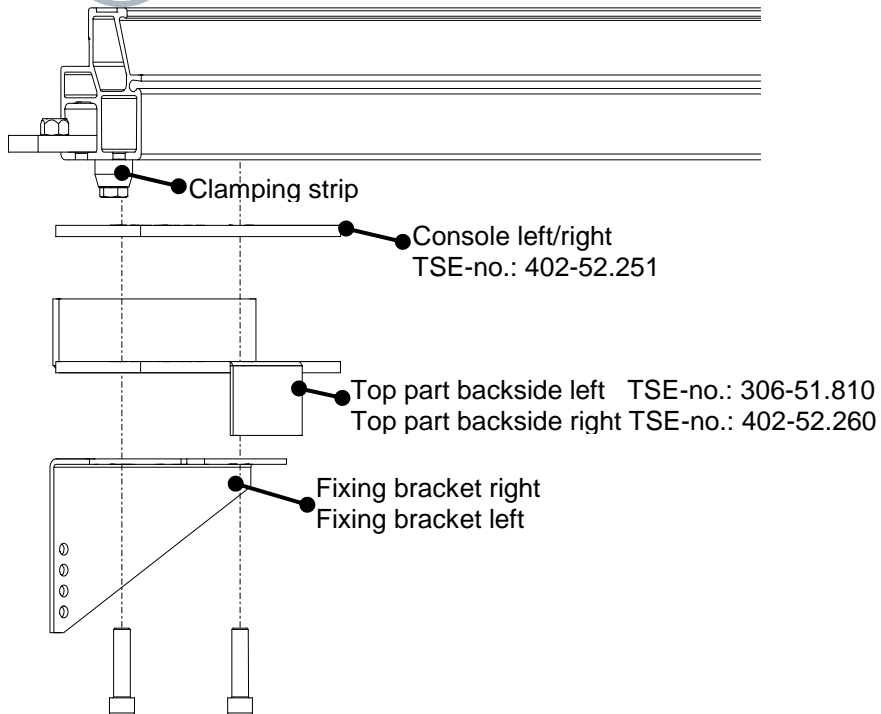

Cylinder screw with internal hex M12x50



Torque 130 Nm


Fixing brackets are part of the **accessories**
TSE-no.: 1274651

Consoles, top parts and screws are part of the **applicable top, accessories or assembly kit.**



The mounting is depicted in driving direction on the right side. Proceed the same way on the left side.

Mounting of crossbar

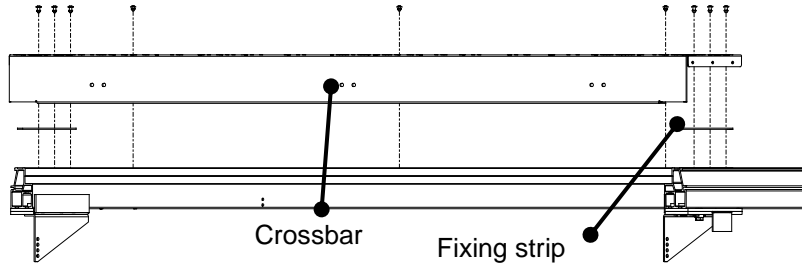1**Mount the crossbar**

Hemlok rivet
KL-BER8.8-10.8mm
TSE-no.: 2221-0819



Hemlok rivet
KL-BER3.4-5.4mm
TSE-no.: 022210-0814



Fixing strip
TSE-no.: 1183603


Rivets and fixing strips are part of the **applicable top, accessories or assembly kits.**

Mounting of rain and cover strip (normally done by tarp maker)

1**Mount the rain and cover strip**

Aluminium rivet


Cover strip for the rain strip

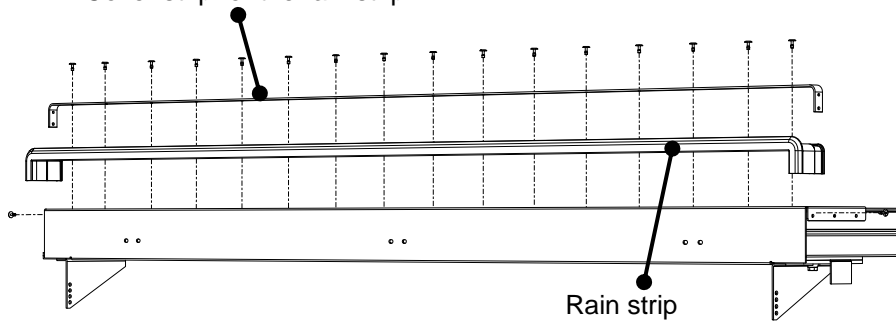

Rain strip

Rain and cover strip are part of the **applicable top, accessories or assembly kit.**

Mounting of double joints

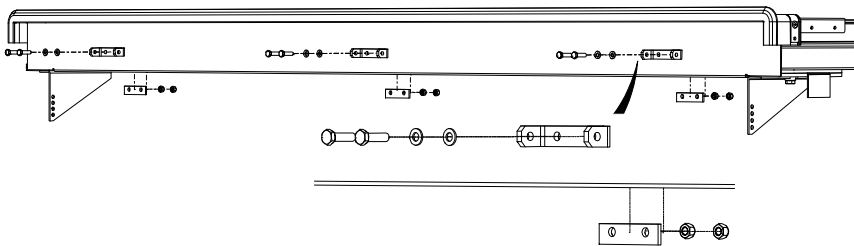1
Mount the double joint


Hexagon screw M8x30



Washer A8.4



KIT2 Double joint



KIT2 Clamping plate upper flap



Hexagon nut M8


Torque 38 Nm

Screws, washers, double joints, clamping plates and washers are part of the **applicable accessories of the upper flap.**




Do not yet fix the double joints tightly, as the setting of the upper flap will be done later.

Mounting of retainers and water drip

1

Rivet the retainers

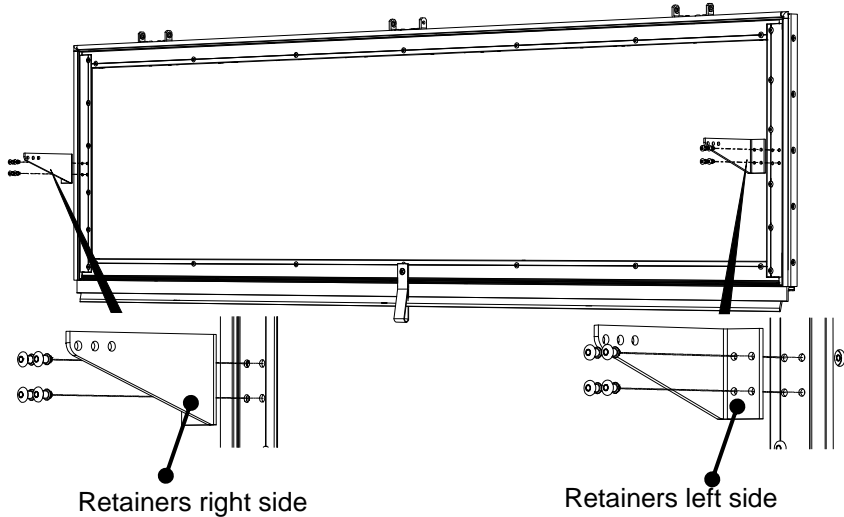

Retainers left side




Retainers right side

Hemlok rivet
KL-BER8.8-10.8mm

Retainers on the left side, retainers on the right side and rivets are part of the **applicable accessories of the upper flap.**

2

Rivet the water drip

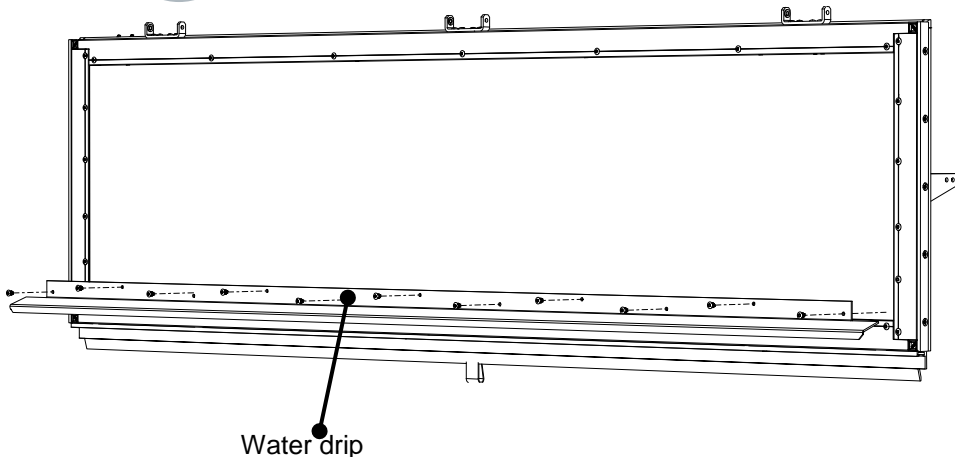
Hemlok rivet
KL-BER4.8-6.8mm

Water drip and rivets are part of the **applicable accessories of the upper flap.**

The borings for the water drip as well as sealing measures at diverted interfaces are executed by the customer.

Mounting of gas pressure springs to the fixing brackets

1

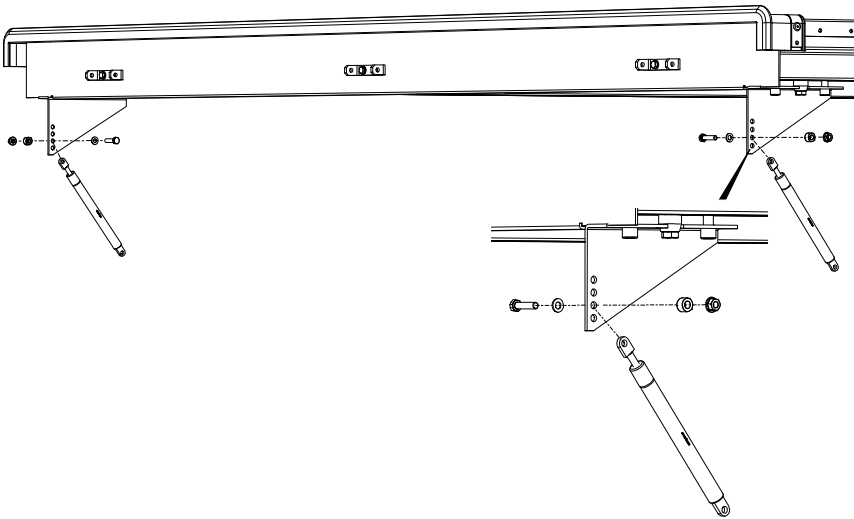

Hexagon Screw M8x35



Washer A8.4



KIT2 sleeve upper flap



Hexagon nut M8



Torque 38 Nm

Screws, washers, sleeves and nuts are part of the **applicable accessories of the upper flap.**




Depending on the height version, the mounting of the gas pressure springs in the borehole positions may vary.



Tighten the screws with a wrench and a torque wrench. Then open it again with ¼ turn backwards

Mounting of upper flap to the crossbar

1

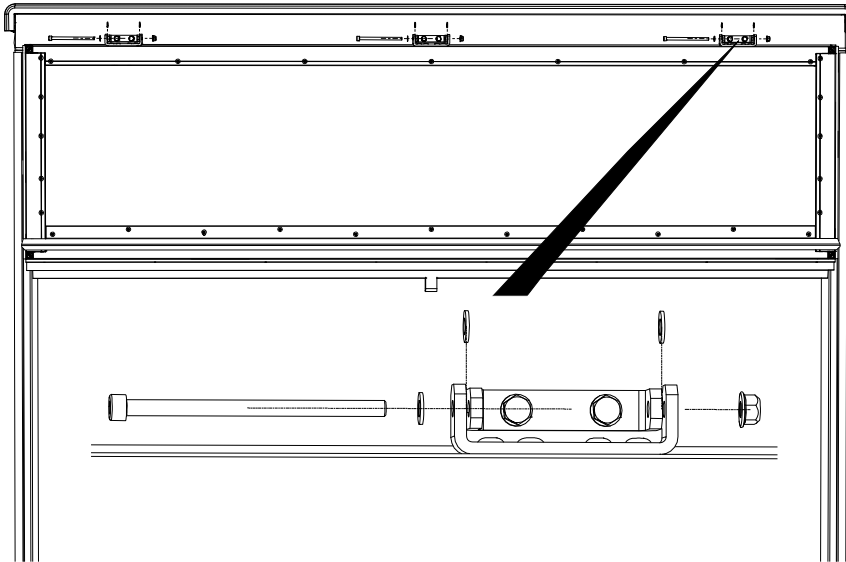

Cylinder screw M8x130



Washer A8.4



Hexagon nut M8



Torque 55,8 Nm

Screws, washers, sleeves and nuts are part of the **applicable accessories of the upper flap.**




Tighten the screws with a wrench and a torque wrench. Then open it again with $\frac{1}{4}$ turn backwards.

From this step of mounting on, three employees must be present during the mounting works!!!

Mounting of gas pressure springs to the upper flap

1

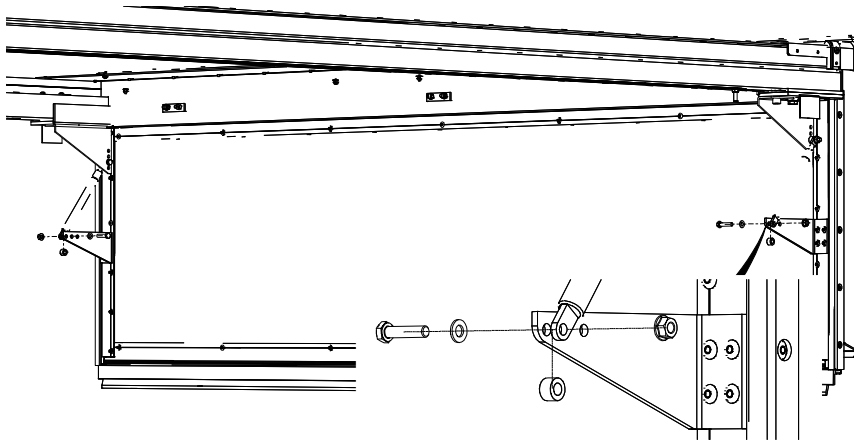

Hexagon screw M8x35



Washer A8.4



KIT2 sleeve upper flap



Sechskanmutter M8

**Torque 38 Nm**

Screws, washers, sleeves and nuts are part of the **applicable accessories of the upper flap.**



Tighten the screws with a wrench and a torque wrench. Then open it again with ¼ turn backwards.



Depending on the height version, the mounting of the gas pressure springs in the borehole positions may vary.

Now the upper flap has to be adjusted by means of the double joints at the crossbars. Hereby, there may only be a distance of 5mm to the stanchions at the left and at the right side. If the distance fits this way, the double joints at the crossbar are tightened.

Annexes
Assembly preloads and tightening torques of screw connections according to VDI guideline 2230

Measure	Strength grade	Assembly preloads for mounting F_{Mtab} in kN for $\mu_g =$							Tightening torque M_a in Nm für / for $\mu_k = \mu_g =$						
		0,08	0,10	0,12	0,14	0,16	0,20	0,24	0,08	0,10	0,12	0,14	0,16	0,20	0,24
M 4	8.8	4,6	4,5	4,4	4,3	4,2	3,9	3,7	2,3	2,6	3,0	3,3	3,6	4,1	4,5
	10.9	6,8	6,7	6,5	6,3	6,1	5,7	5,4	3,3	3,9	4,6	4,8	5,3	6,0	6,6
	12.9	8,0	7,8	7,6	7,4	7,1	6,7	6,3	3,9	4,5	5,1	5,6	6,2	7,0	7,8
M 5	8.8	7,6	7,4	7,2	7,0	6,8	6,4	6,0	4,4	5,2	5,9	6,5	7,1	8,1	9,0
	10.9	11,1	10,8	10,6	10,3	10,0	9,4	8,8	6,5	7,6	8,6	9,5	10,4	11,9	13,2
	12.9	13,0	12,7	12,4	12,0	11,7	11,0	10,3	7,6	8,9	10,0	11,2	12,2	14,0	15,5
M 6	8.8	10,7	10,4	10,2	9,9	9,6	9,0	8,4	7,7	9,0	10,1	11,3	12,3	14,1	15,6
	10.9	15,7	15,3	14,9	14,5	14,1	13,2	12,4	11,3	13,2	14,9	16,5	18,0	20,7	22,9
	12.9	18,4	17,9	17,5	17,0	16,5	15,5	14,5	13,2	15,4	17,4	19,3	21,1	24,2	26,8
M 7	8.8	15,5	15,1	14,8	14,4	14,0	13,1	12,3	12,6	14,8	16,8	18,7	20,5	23,6	26,2
	10.9	22,7	22,5	21,7	21,1	20,5	19,3	18,1	18,5	21,7	24,7	27,5	30,1	34,7	38,5
	12.9	26,6	26,0	25,4	24,7	24,0	22,6	21,2	21,6	25,4	28,9	32,2	35,2	40,6	45,1
M 8	8.8	19,5	19,1	18,6	18,1	17,6	16,5	15,5	18,5	21,6	24,6	27,3	29,8	34,3	38,0
	10.9	28,7	28,0	27,3	26,6	25,8	24,3	22,7	27,2	31,8	36,1	40,1	43,8	50,3	55,8
	12.9	33,6	32,8	32,0	31,1	30,2	28,4	26,6	31,8	37,2	42,2	46,9	51,2	58,9	65,3
M10	8.8	31,0	30,3	29,6	28,8	27,9	26,3	24,7	36	43	48	54	59	68	75
	10.9	45,6	44,5	43,4	42,2	41,0	38,6	36,2	53	63	71	79	87	100	110
	12.9	53,3	52,1	50,8	49,4	48,0	45,2	42,4	62	73	83	93	101	116	129
M 12	8.8	45,2	44,1	43,0	41,9	40,7	38,3	35,9	63	73	84	93	102	117	130
	10.9	66,3	64,8	63,2	61,5	59,8	56,3	52,8	92	108	123	137	149	172	191
	12.9	77,6	75,9	74,0	72,0	70,0	65,8	61,8	108	126	144	160	175	201	223
M 14	8.8	62,0	60,6	59,1	57,5	55,9	52,6	49,3	100	117	133	148	162	187	207
	10.9	91,0	88,9	86,7	84,4	82,1	77,2	72,5	146	172	195	218	238	274	304
	12.9	106,5	104,1	101,5	98,8	96,0	90,4	84,8	171	201	229	255	279	321	356
M 16	8.8	84,7	82,9	80,9	78,8	76,6	72,2	67,8	153	180	206	230	252	291	325
	10.9	124,4	121,7	118,8	115,7	112,6	106,1	99,6	224	264	302	338	370	428	477
	12.9	145,5	142,4	139,0	135,4	131,7	124,1	116,6	262	309	354	395	433	501	558
M 18	8.8	107	104	102	99	96	91	85	220	259	295	329	360	415	462
	10.9	152	149	145	141	137	129	121	314	369	421	469	513	592	657
	12.9	178	174	170	165	160	151	142	367	432	492	549	601	692	769
M 20	8.8	136	134	130	127	123	116	109	308	363	415	464	509	588	655
	10.9	194	190	186	181	176	166	156	438	517	592	661	725	838	933
	12.9	227	223	217	212	206	194	182	513	605	692	773	848	980	1092
M 22	8.8	170	166	162	158	154	145	137	417	495	567	634	697	808	901
	10.9	242	237	231	225	219	207	194	595	704	807	904	993	1151	1284
	12.9	283	277	271	264	257	242	228	696	824	945	1057	1162	1347	1502
M 24	8.8	196	192	188	183	173	168	157	529	625	714	798	875	1011	1126
	10.9	280	274	267	260	253	239	224	757	890	1017	1136	1246	1440	1604
	12.9	327	320	313	305	296	279	262	882	1041	1190	1329	1458	1685	1877

Quelle: VDI-Richtlinie 2230 Blatt 1 S. 109

Assembly preload F_{Mtab} and tightening torque M_a with $\nu = 0,9$ for shank bolts with metric standard thread according to DIN ISO, 68, DIN ISO 724, DIN 13-19; head dimensions of hexagonal bolts according to DIN EN ISO 4014 to DIN EN ISO 4018 hexalobular external driving head bolts according to DIN 34 800 or cylindrical bolts according to DIN EN ISO 4762 and hole „medium“ according to DIN EN 20273

Revision levels

Revision Level	Kind of change	Date	Name
00	New creation of mounting instruction	08 May 2019	Laib / Maier
01	Chapter 9 and chapter 11 have been supplemented by a note text	01 August 2019	Boll / Maier